

INSTRUCTIONS FOR THE DESKTOP COUNTDOWN CLOCK

Your new Countdown Clock is an electronic hourglass. At a glance, it will show you how many days, hours, minutes and seconds remain until your special date.

To personalize the Countdown Clock, you'll have to set the clock for the current date and time and the future date.

On the back of your clock are four buttons marked MODE, A, B, and C. These buttons are used to enter the dates and times.

SETTING YOUR COUNTDOWN CLOCK FOR YOUR FUTURE SPECIAL DATE

When you install the 2 AA batteries, the clock will be in Countdown Mode. At this time, the screen will display "0" Days, "0" Hrs, "0" Min, and "0" Sec.

Press the MODE button for about 3 seconds until "Month," "Date," and "Year" begin flashing. Using the A, B, and C buttons, set up a special future date of "Month," "Date," and "Year." Press the MODE button once again to switch to the next screen where "Hrs," "Min," and "Sec" are flashing. Press the A and B buttons to set up a special future time. (*Note: The C button does not work in this mode, as seconds cannot be set*).

SETTING YOUR COUNTDOWN CLOCK FOR THE CURRENT DATE AND TIME

Press the MODE button once more to make the clock go back to the Countdown Mode. At this time, a countdown will be displaying on the screen.

Press the MODE button once again to switch to the Clock Mode ("Clock" will be appearing on the right upper corner of the screen). Press the MODE button once again and "Hrs," "Min," and "Sec" will begin flashing. Press the A and B buttons to set up the current time (*Note: The C button does not work in this mode, as seconds cannot be set*).

Press the MODE button once again. "Month", "Date", and "Year" will begin flashing. Press the A, B, and C buttons to set the current date.

Press the MODE button once again to go into the countdown mode to show the remaining time to your special date. To display the current date and time, press the MODE button once more. By pressing the MODE button you can switch between the clock and countdown modes.

When displaying the current date and time, you can press the A button to select 12 Hour mode or 24 Hour mode. If you prefer the 12 Hour mode, PM will be displayed at the left bottom corner when the time is past 12:00 noon.